


Place Note on Plans: Beam Hold-Downs and Shear Keys shall be placed between the Outside Beam and first Interior Beam, Upstream Side of the Structure at all Abutments.

The cost for furnishing and installing hold-down brackets shall be considered subsidiary to Class "C" Concrete.

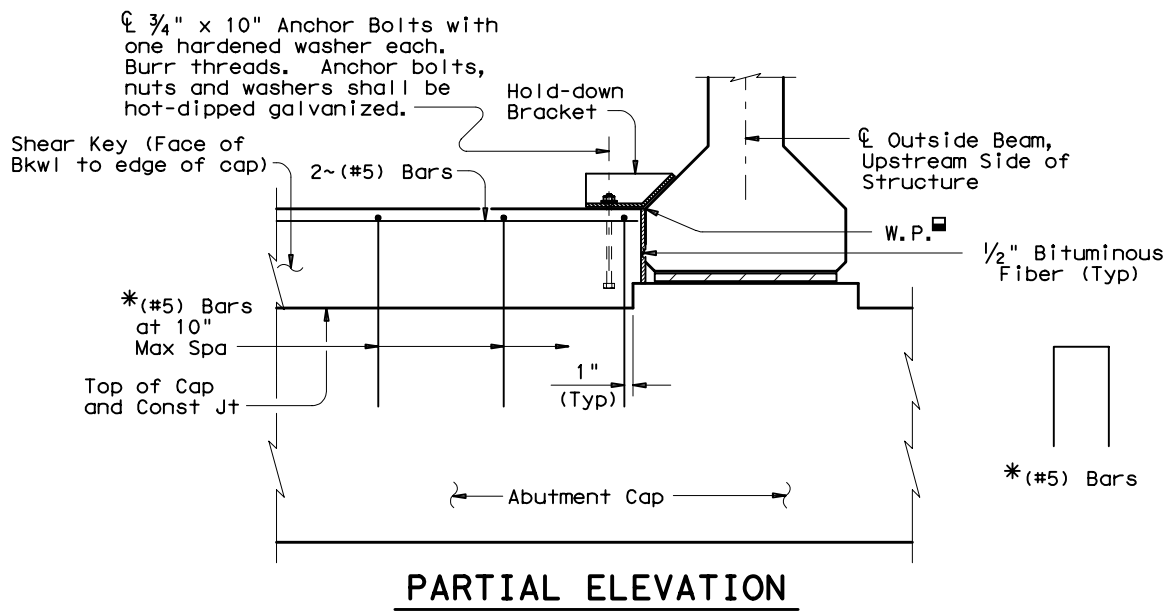

- Pour Shear Key flush to Working Point (W.P.). $\frac{1}{2}$ " bituminous fiber shall be installed at the interface of the beam and shear key. Shear Key concrete to be poured after beams are placed. Care shall be taken to keep concrete from flowing under the beams.

Fig. 3-31